

Planting Assistant: Implement configuration


In this article, you'll learn how to configure an implement.

Tip: Before configuring the implement, [check out this article](#) to learn how to select and set up a vehicle.


Arms configuration

Follow the steps below to set up the implement:

1. In the **Vehicle configuration** page, select **Arm configuration**.

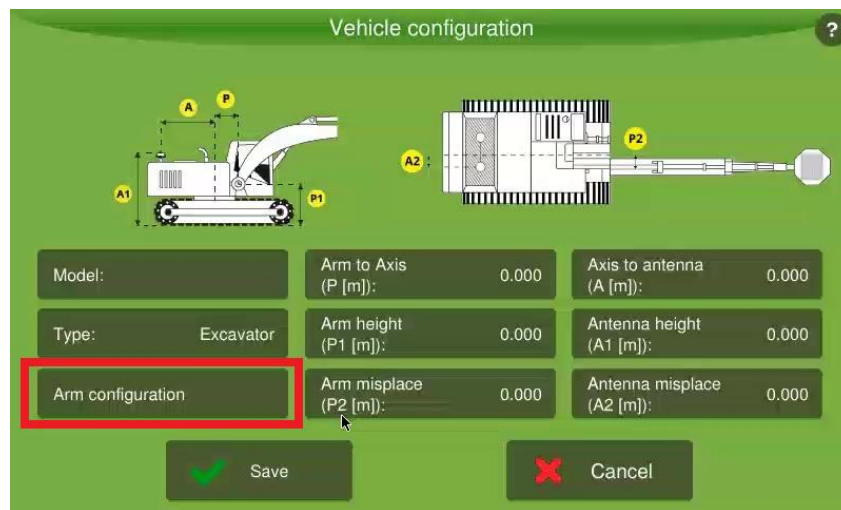

2. Now, fill in the measurements for A and B.
 - **A:** Measured in meters (m) from the center shaft at the start of the boom to the center shaft at the start of the boom.
 - **B:** Measured in meters (m) from the center of the starting axis of the arm to the center of the starting axis of the head.

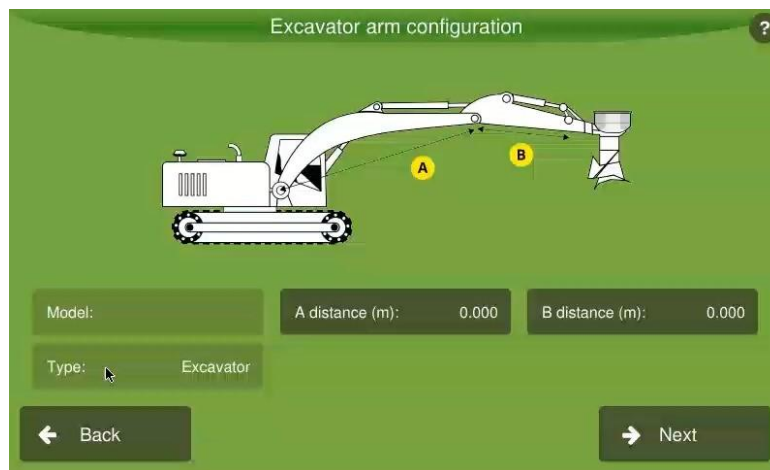


Now that you have set up the arm, you will configure the head of the implement.

Head configuration

In the **Excavator arm configuration** page, press **Next** to configure the head of the implement.

- **C**: Measured in meters (m) from the center of the head starting axis to the center of the planting rattle axis.

Tip: Point C is likely the most difficult to measure. If possible, use the measurement provided in the tool's design specifications.

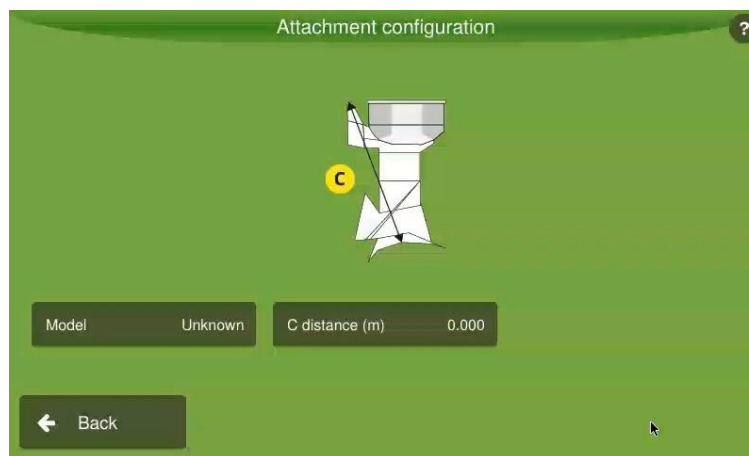

Implement setup is complete!